




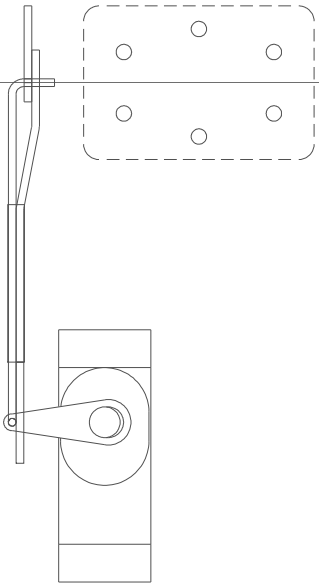


Bring tip to this template

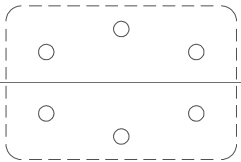



Tape wings

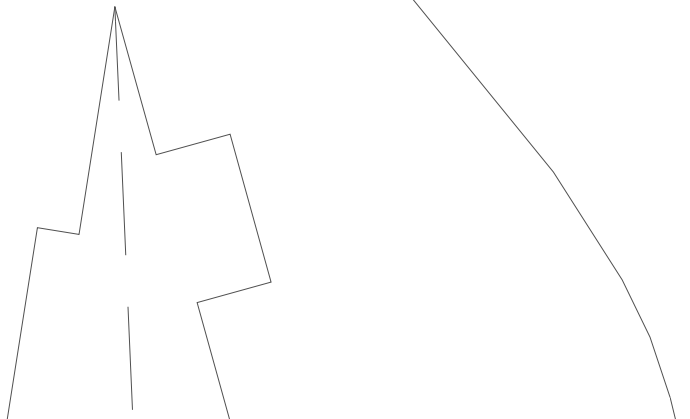

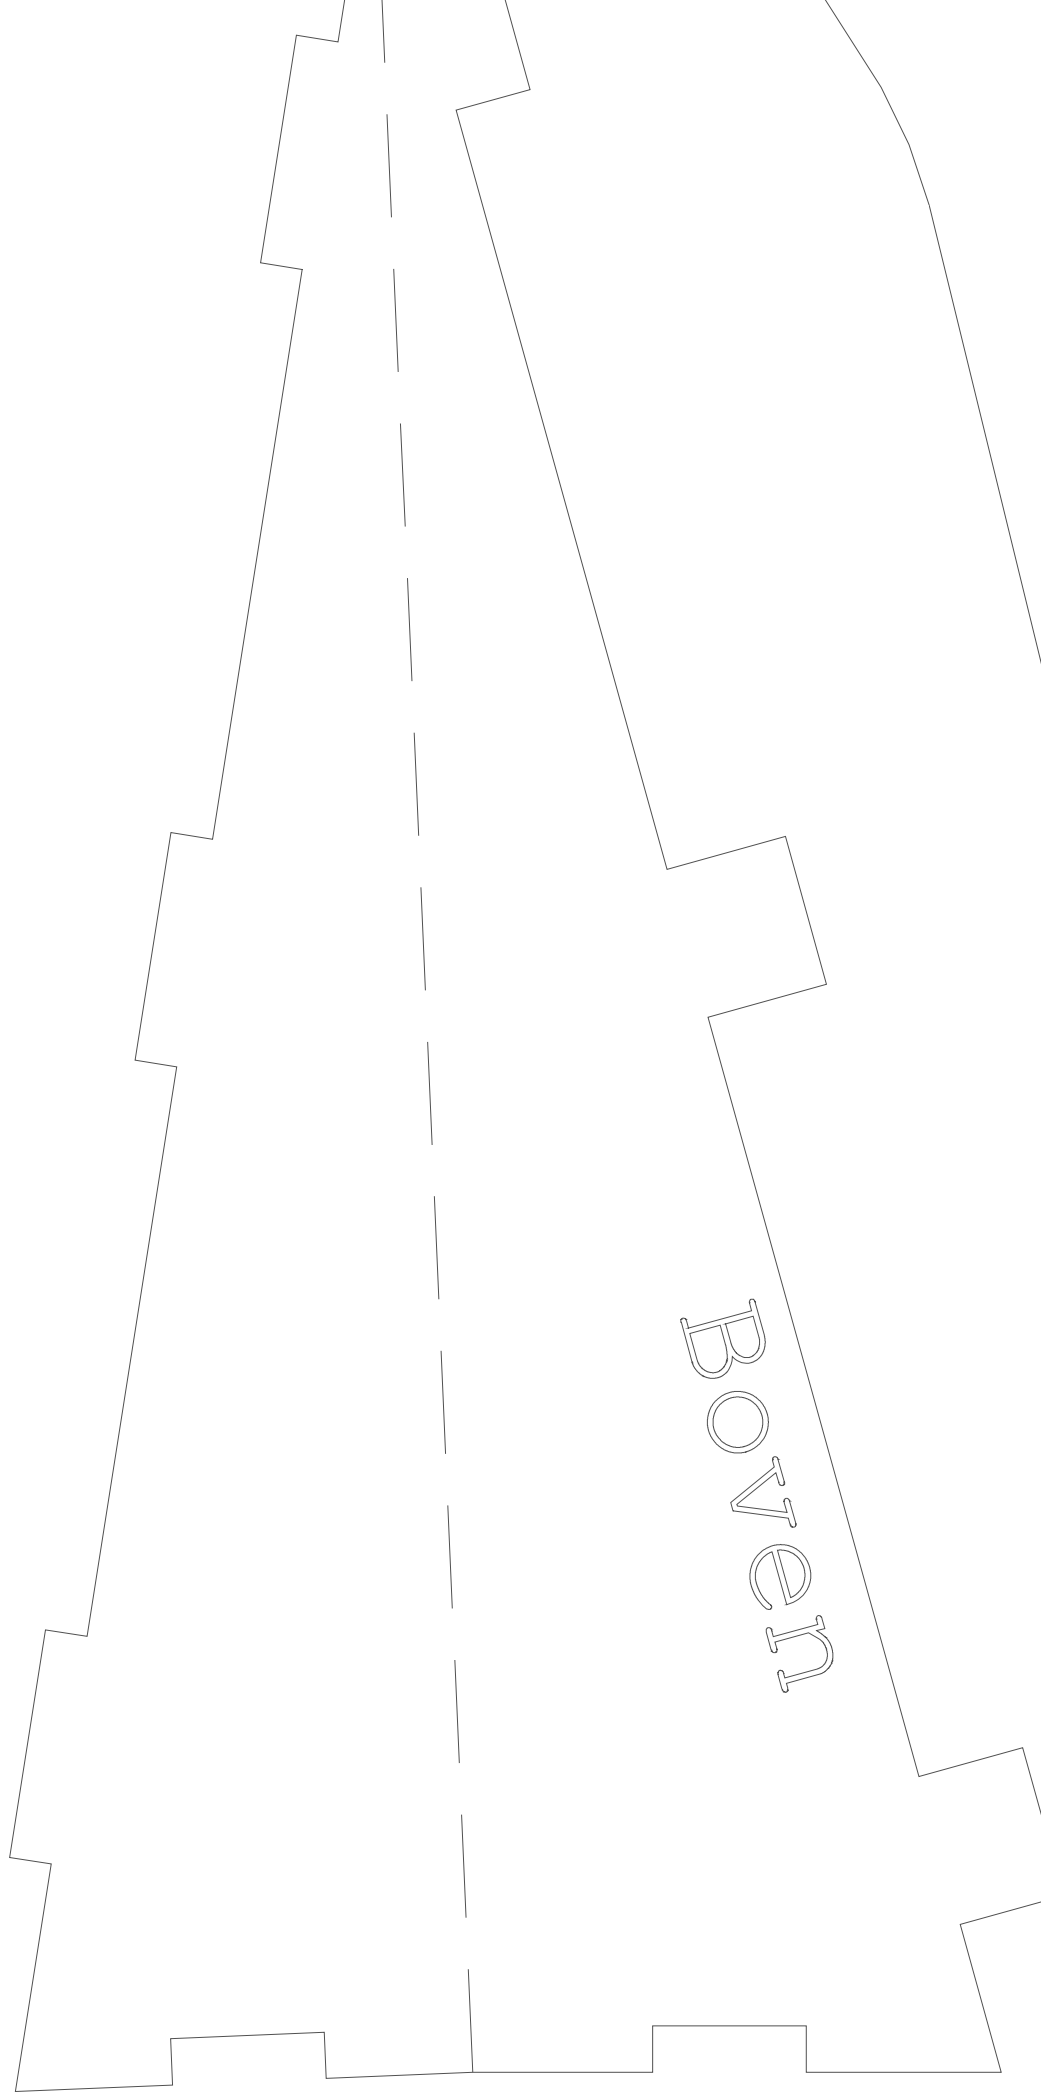

BOYEN

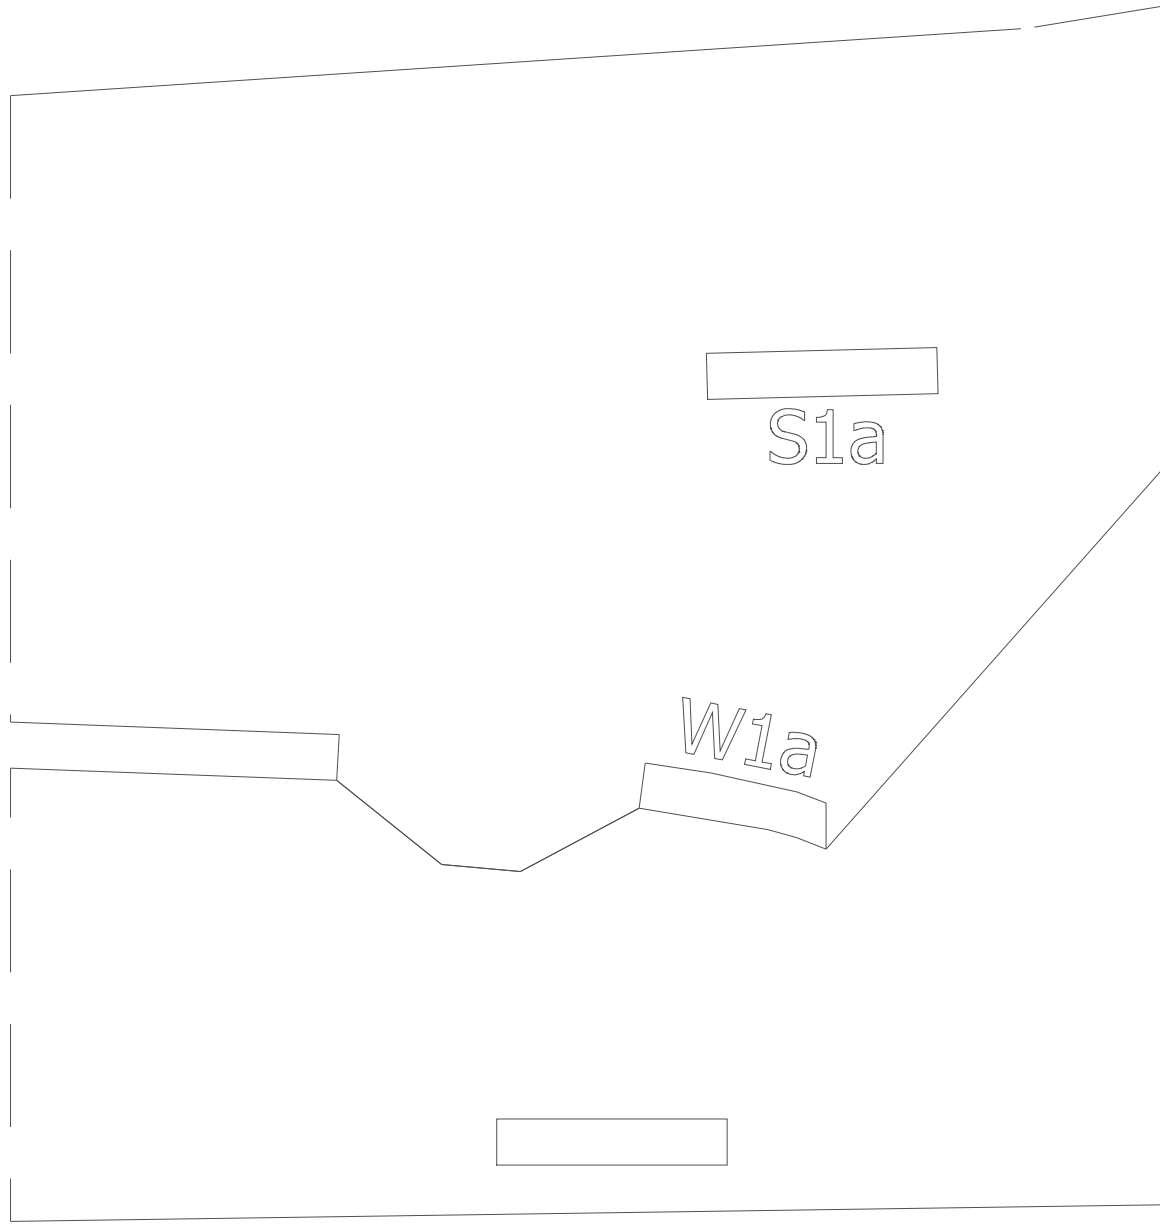

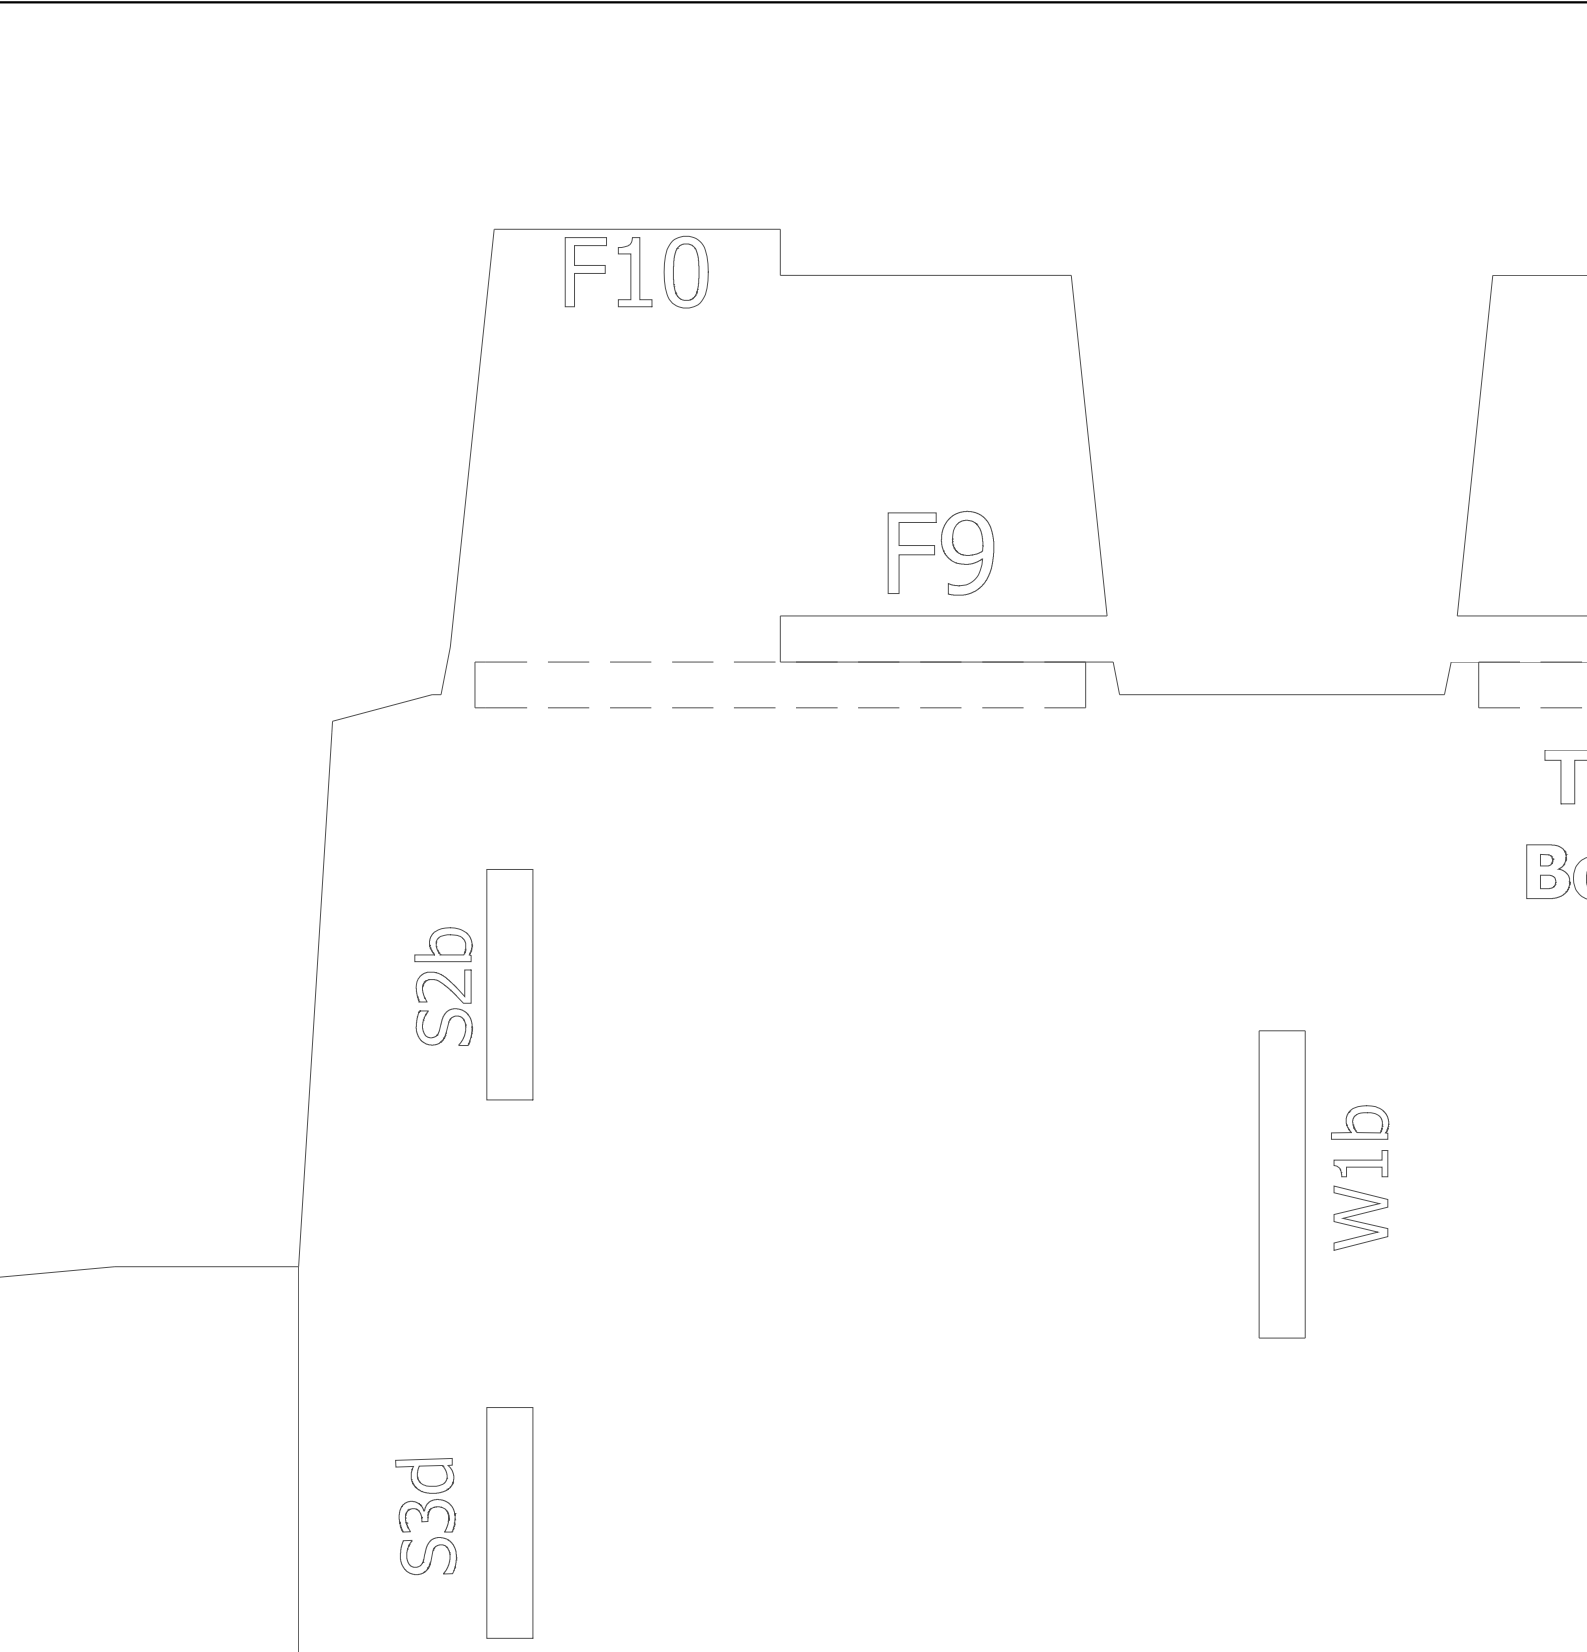



PCS






W1a




S2a

S3c



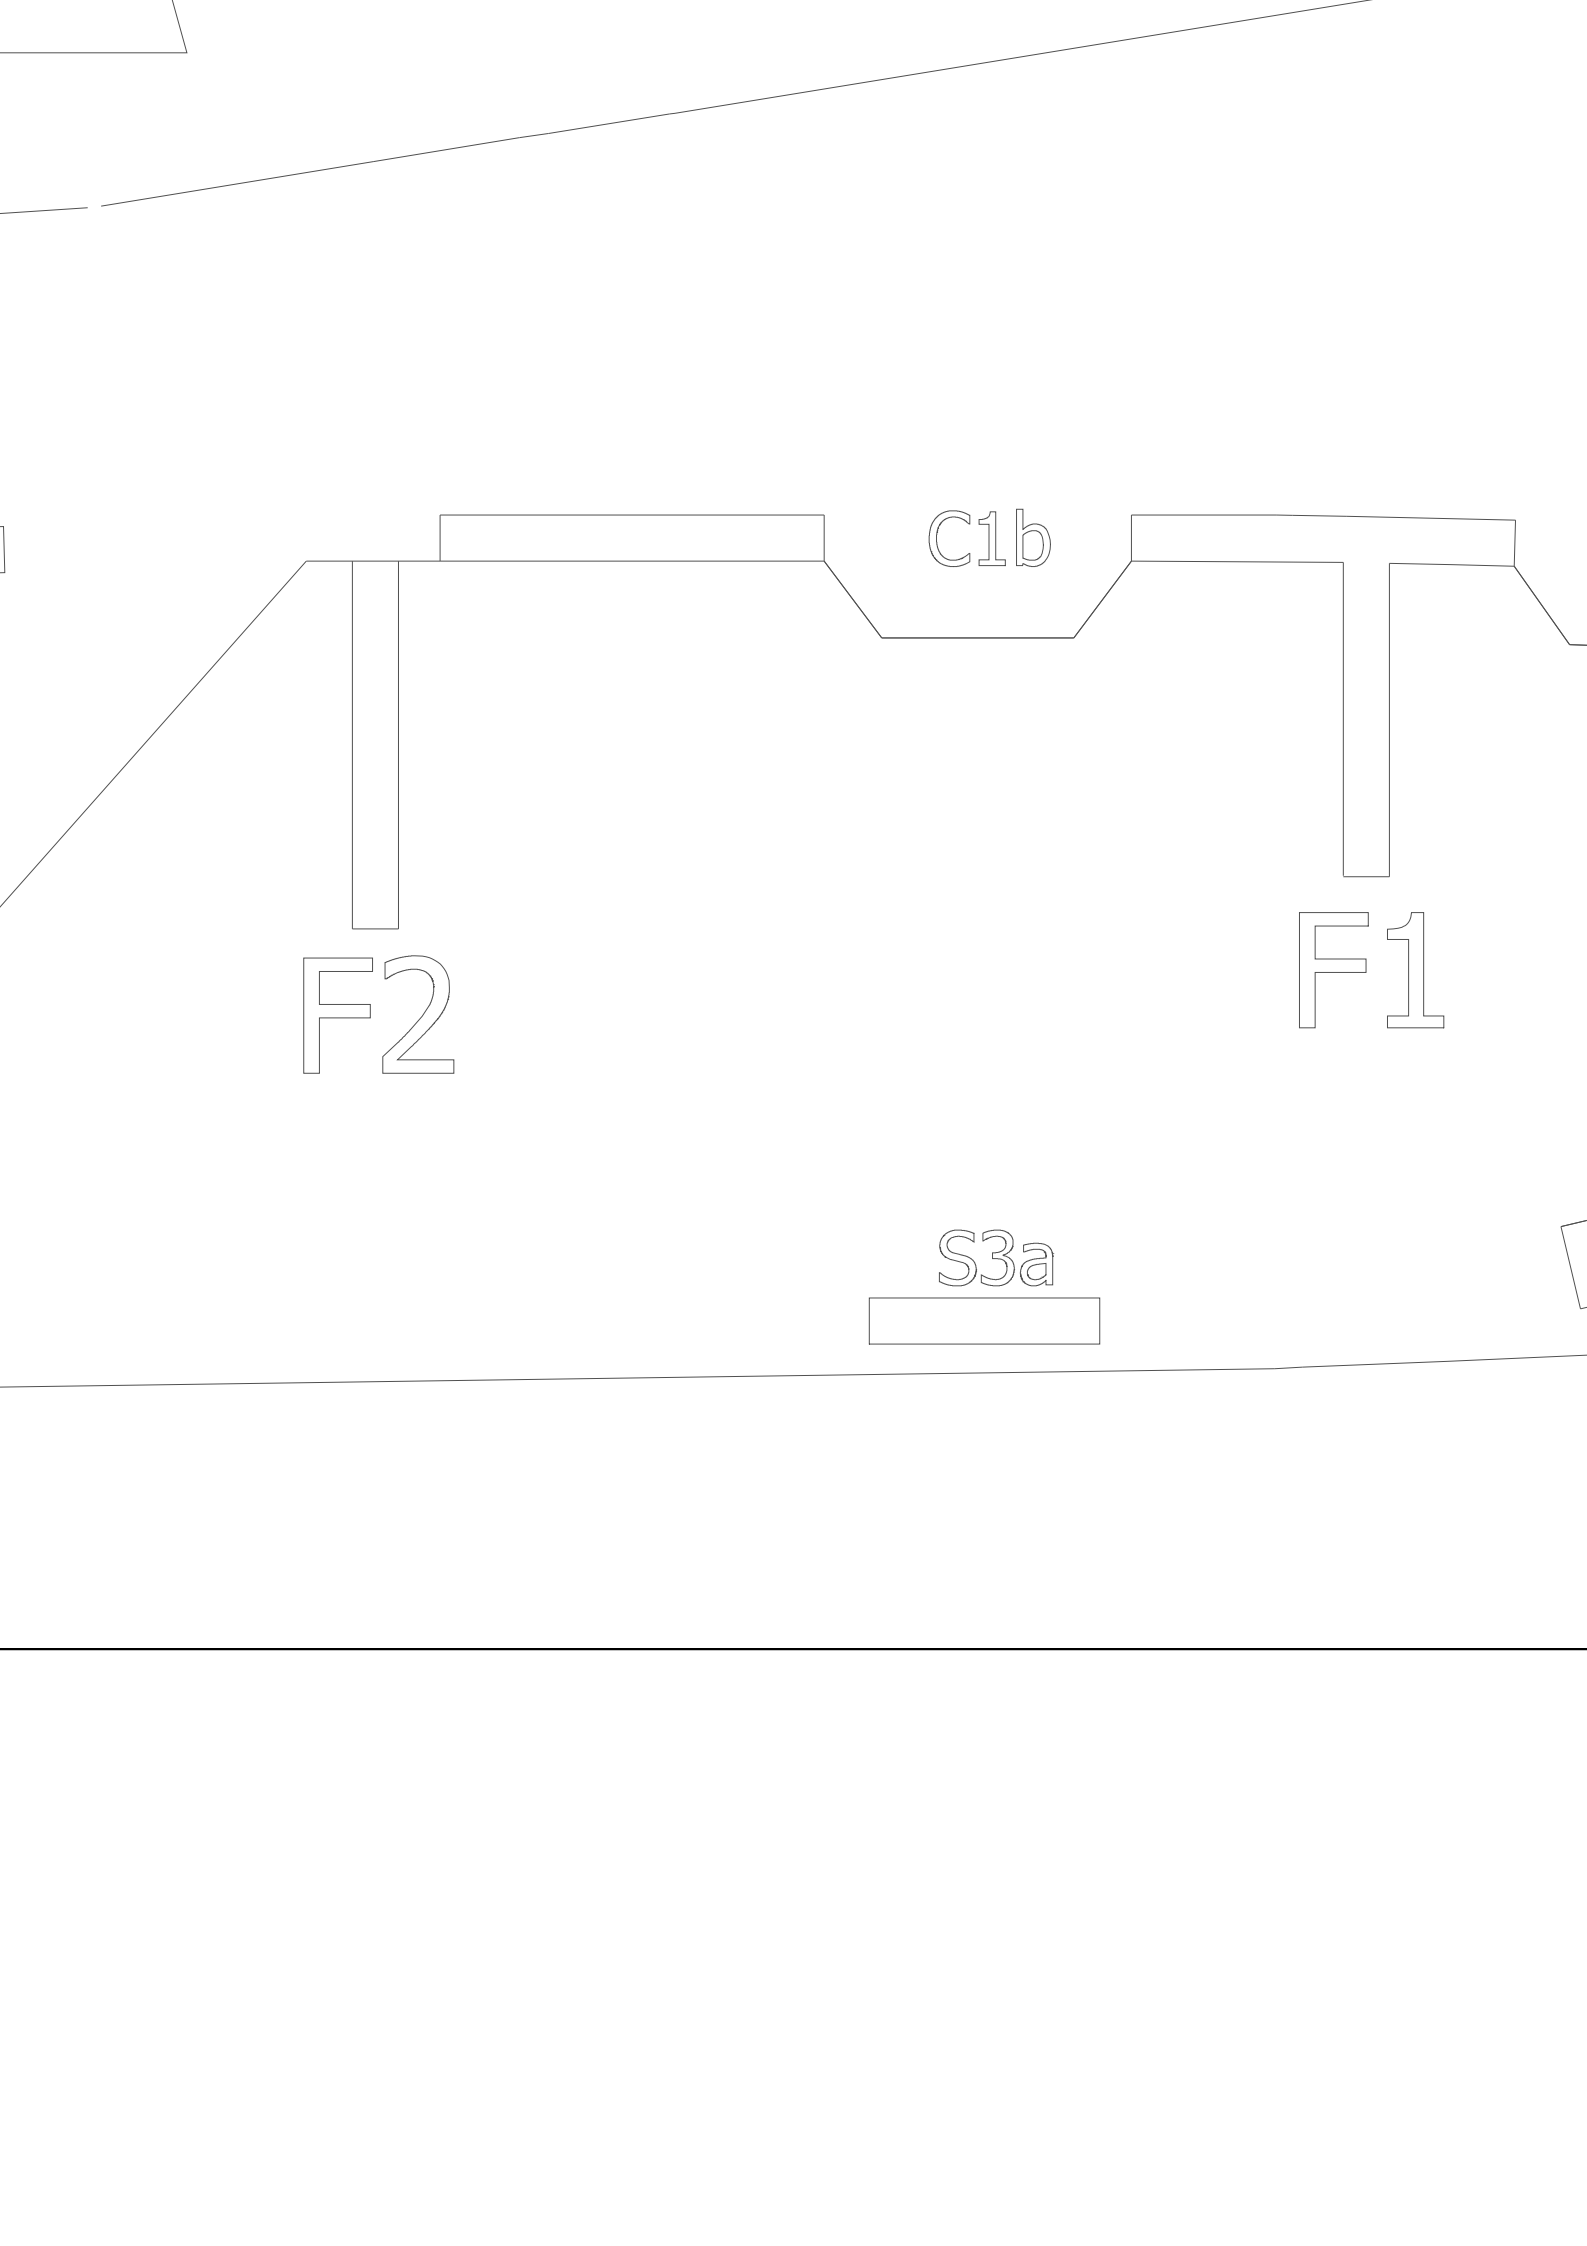

DTM

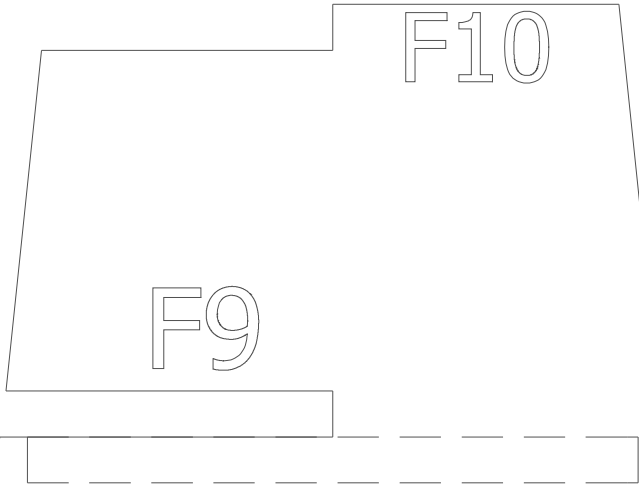

Top: F7
 Bottom: F8



S2b



S3d

Da

By



Wing

Mater

Weig

This

S3d

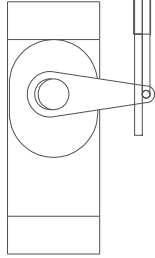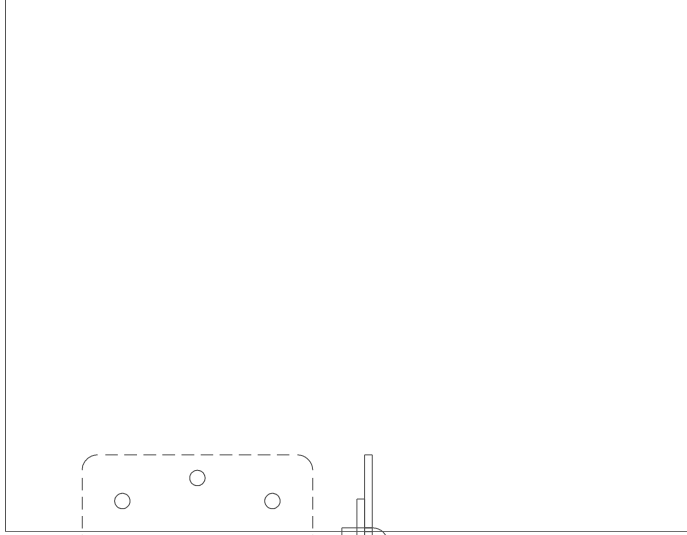



W1

w1




BTMM

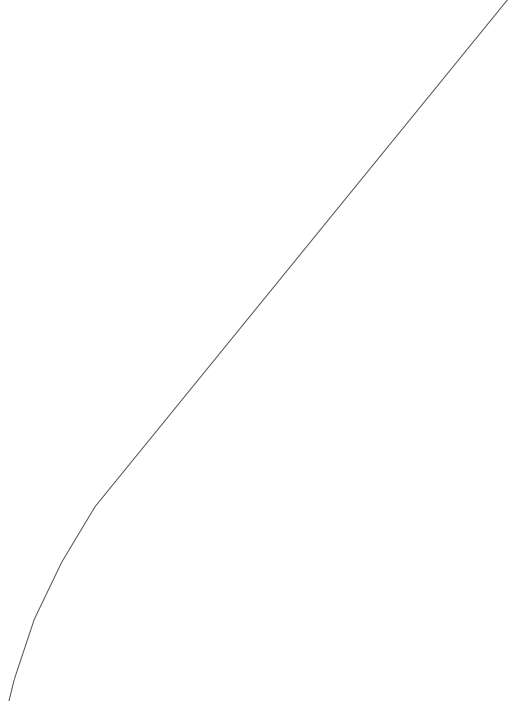


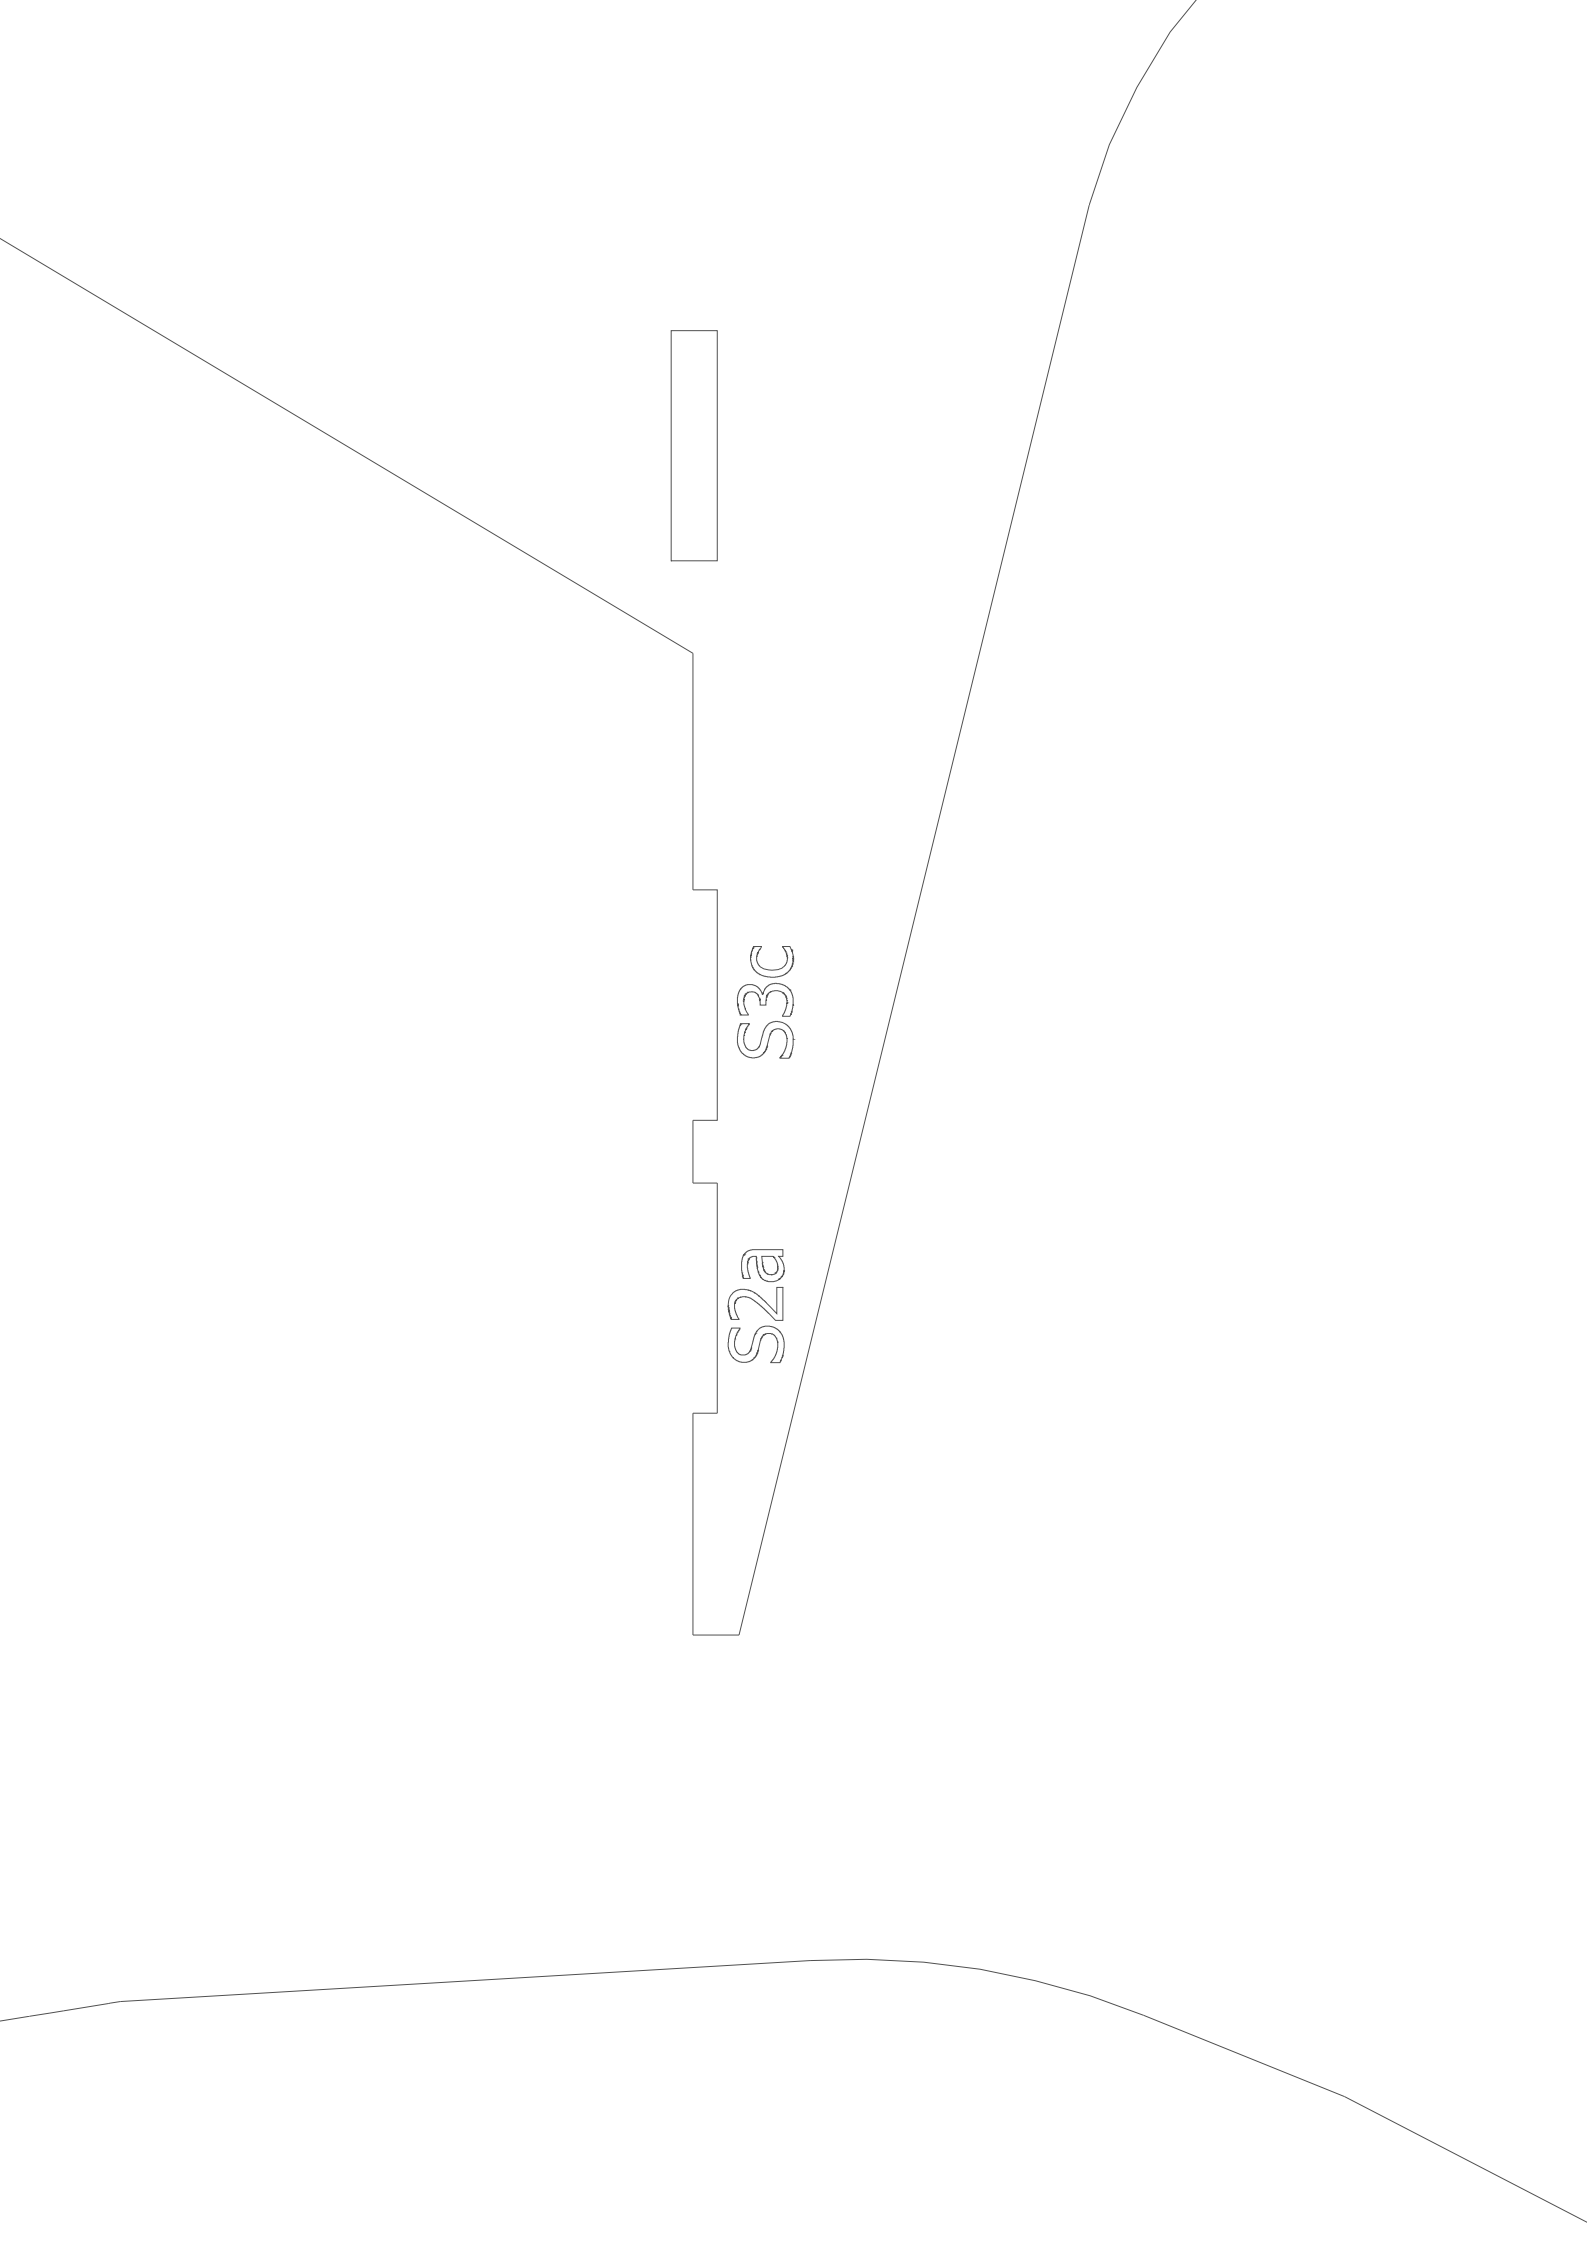


S2a

S3c

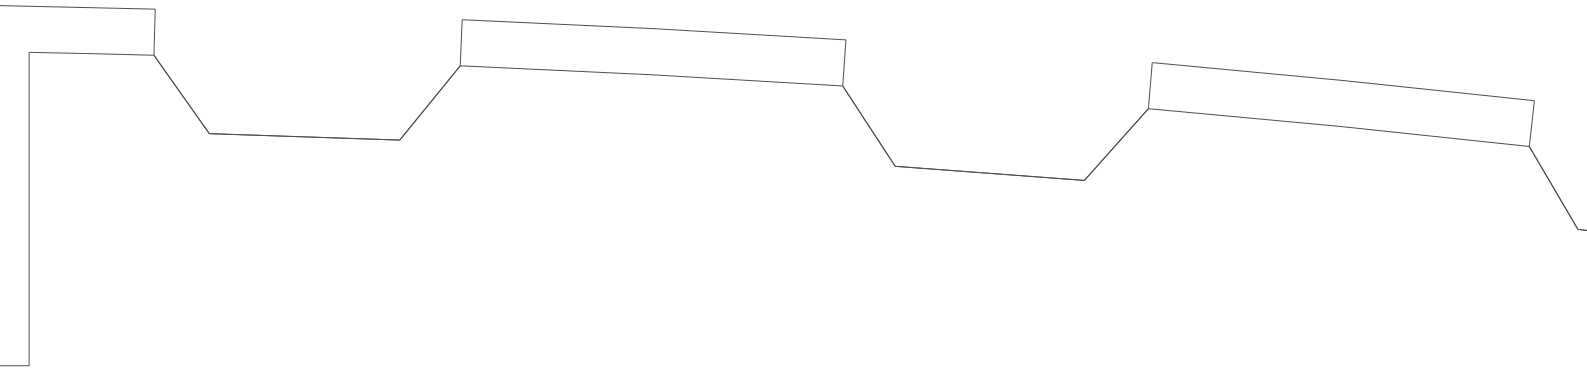

1

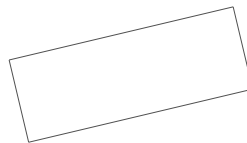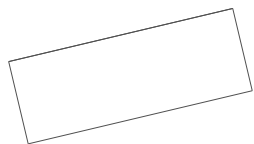

Dassault Aviation R

By: Prop-er



Wingspan: 1000mm (40")


Material: FFF or 6mm Depron




Weight: 300 gr (empty) 600 gr (AUW)


This plan is copyright protected.



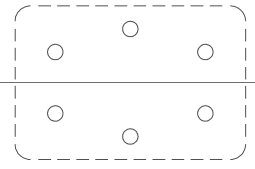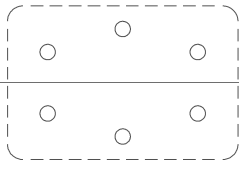

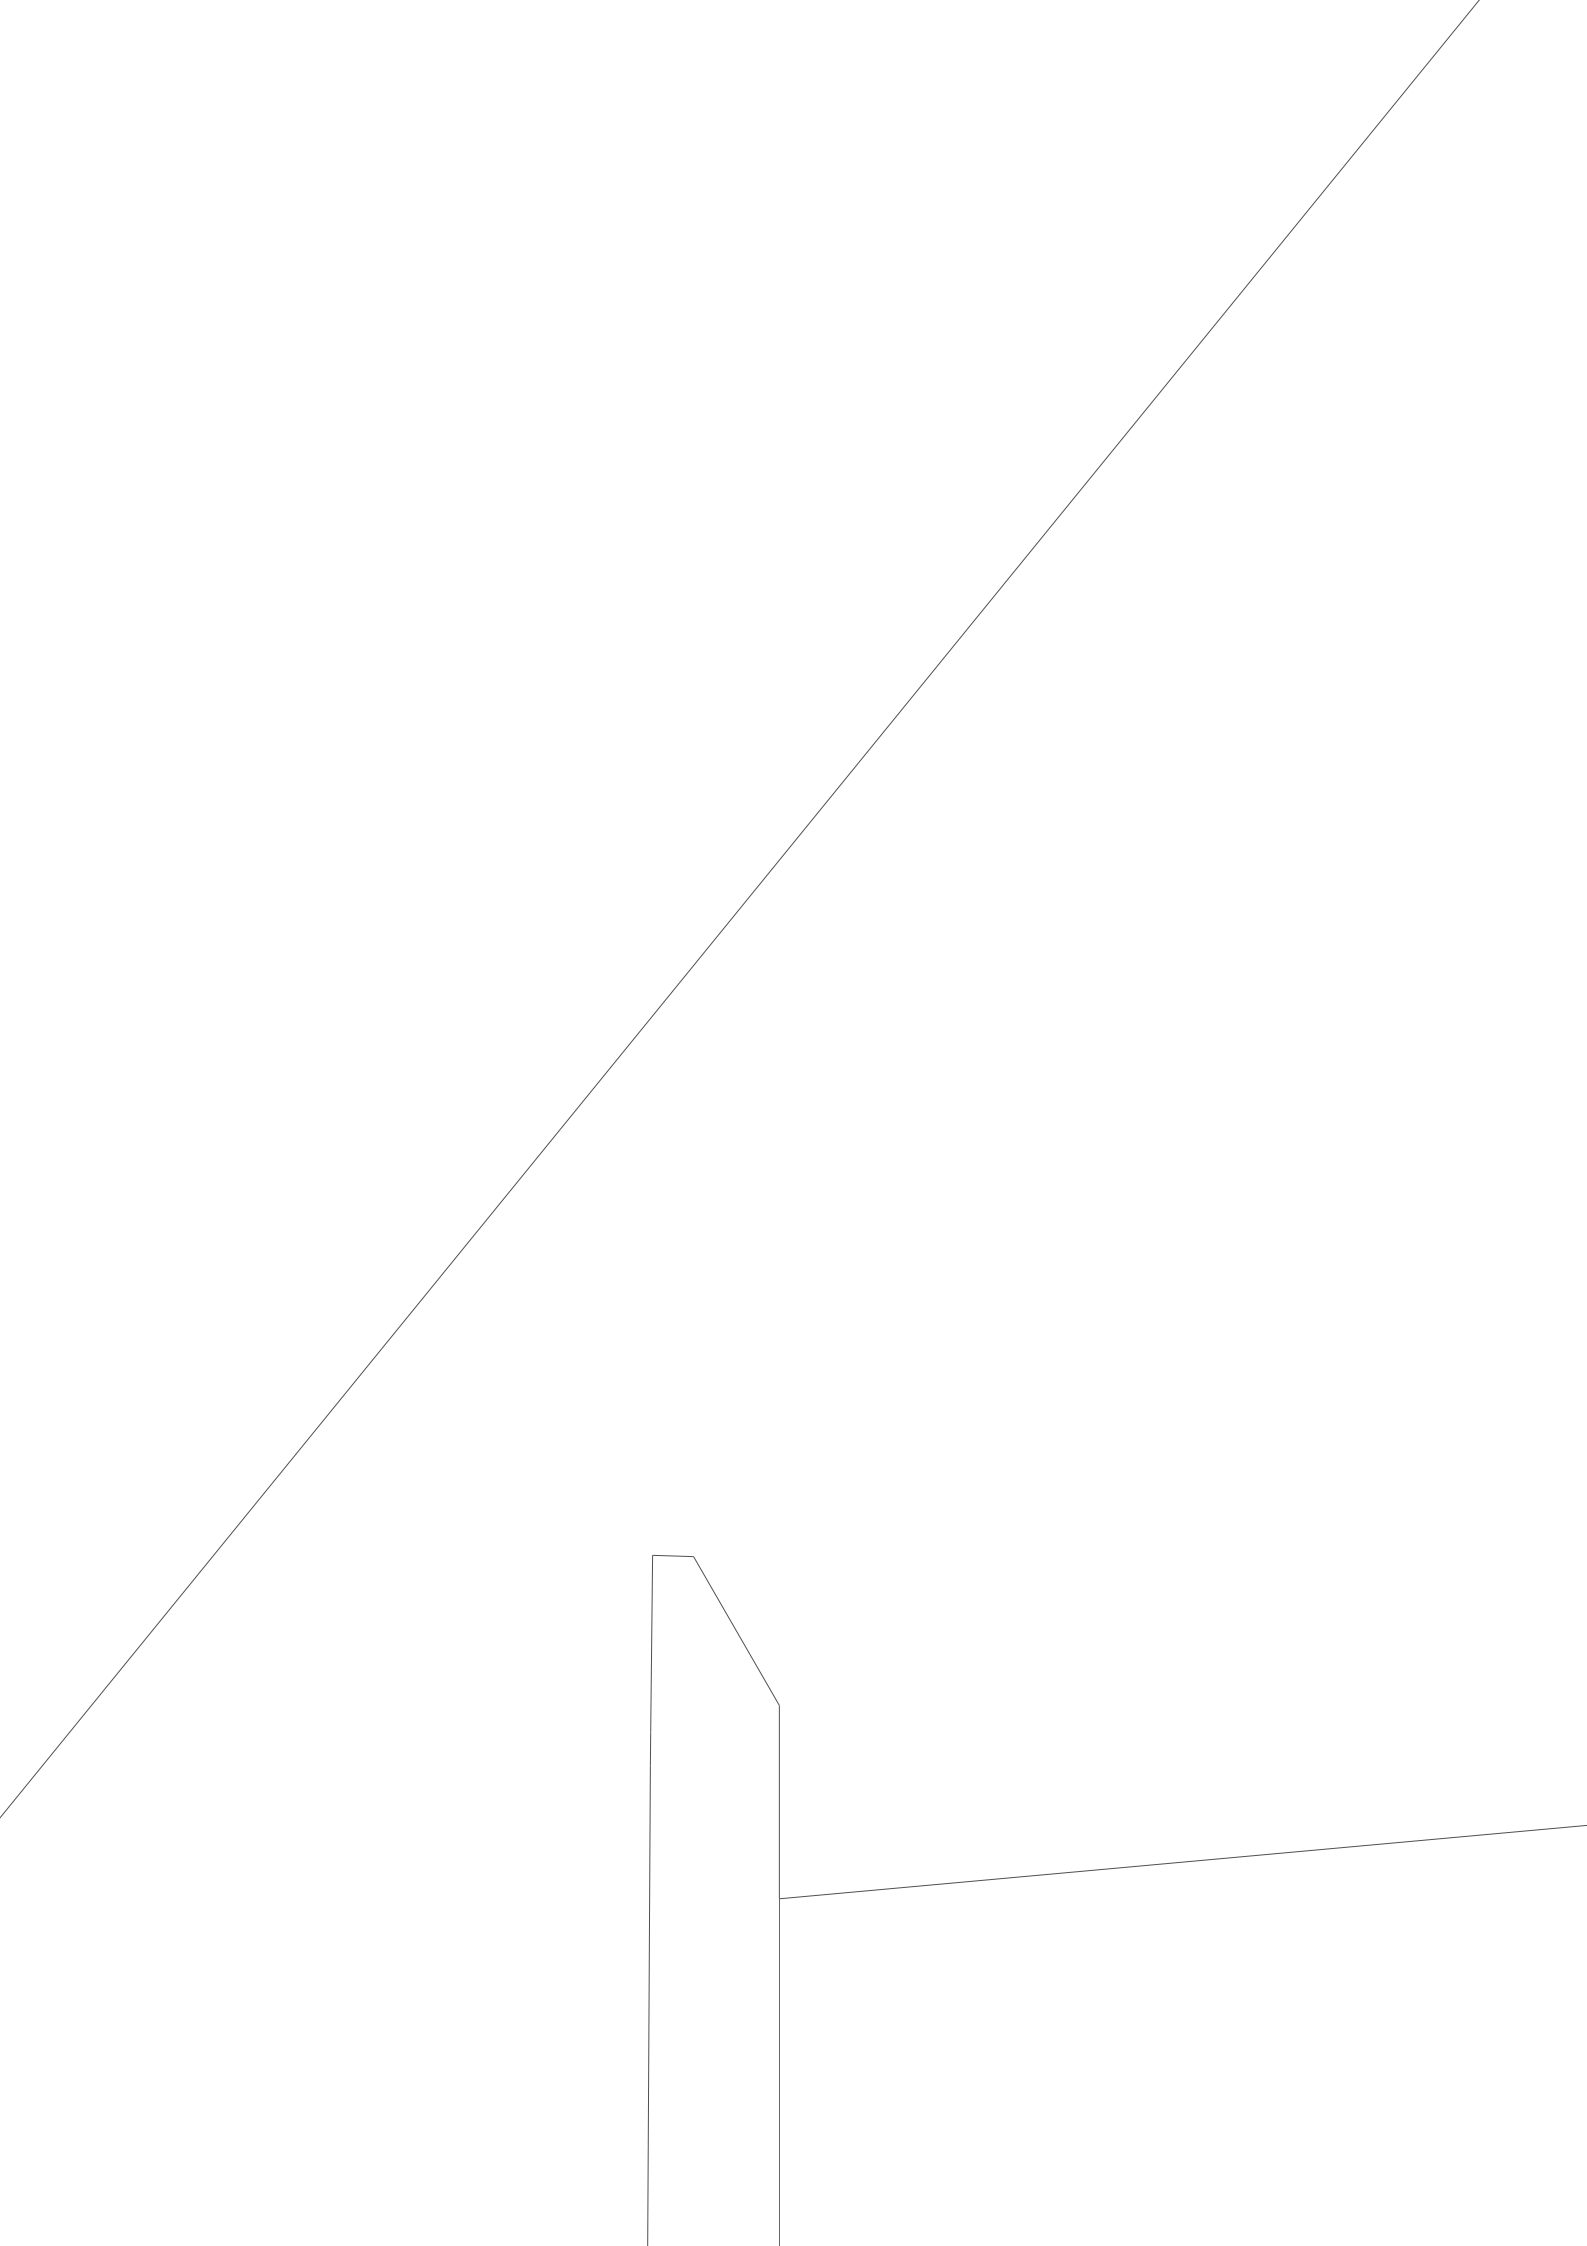


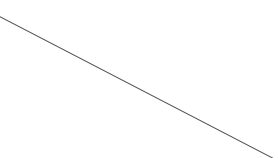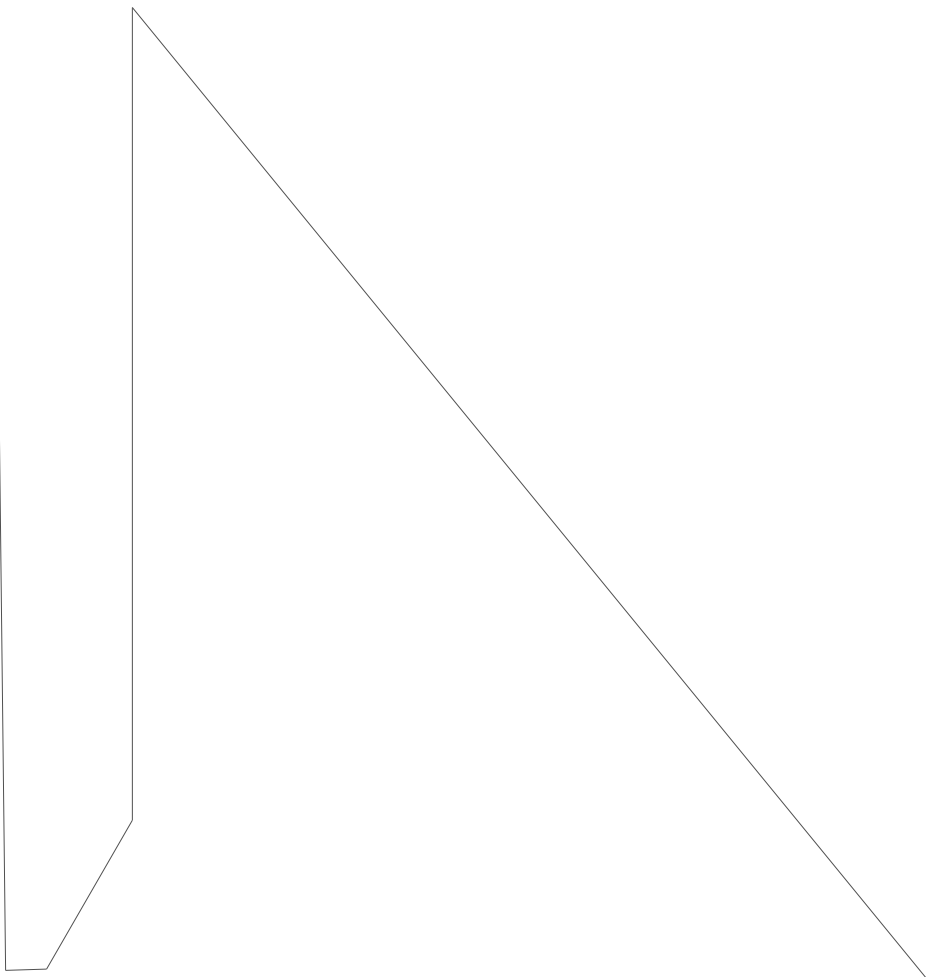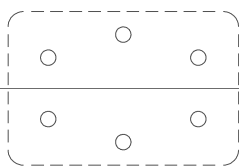


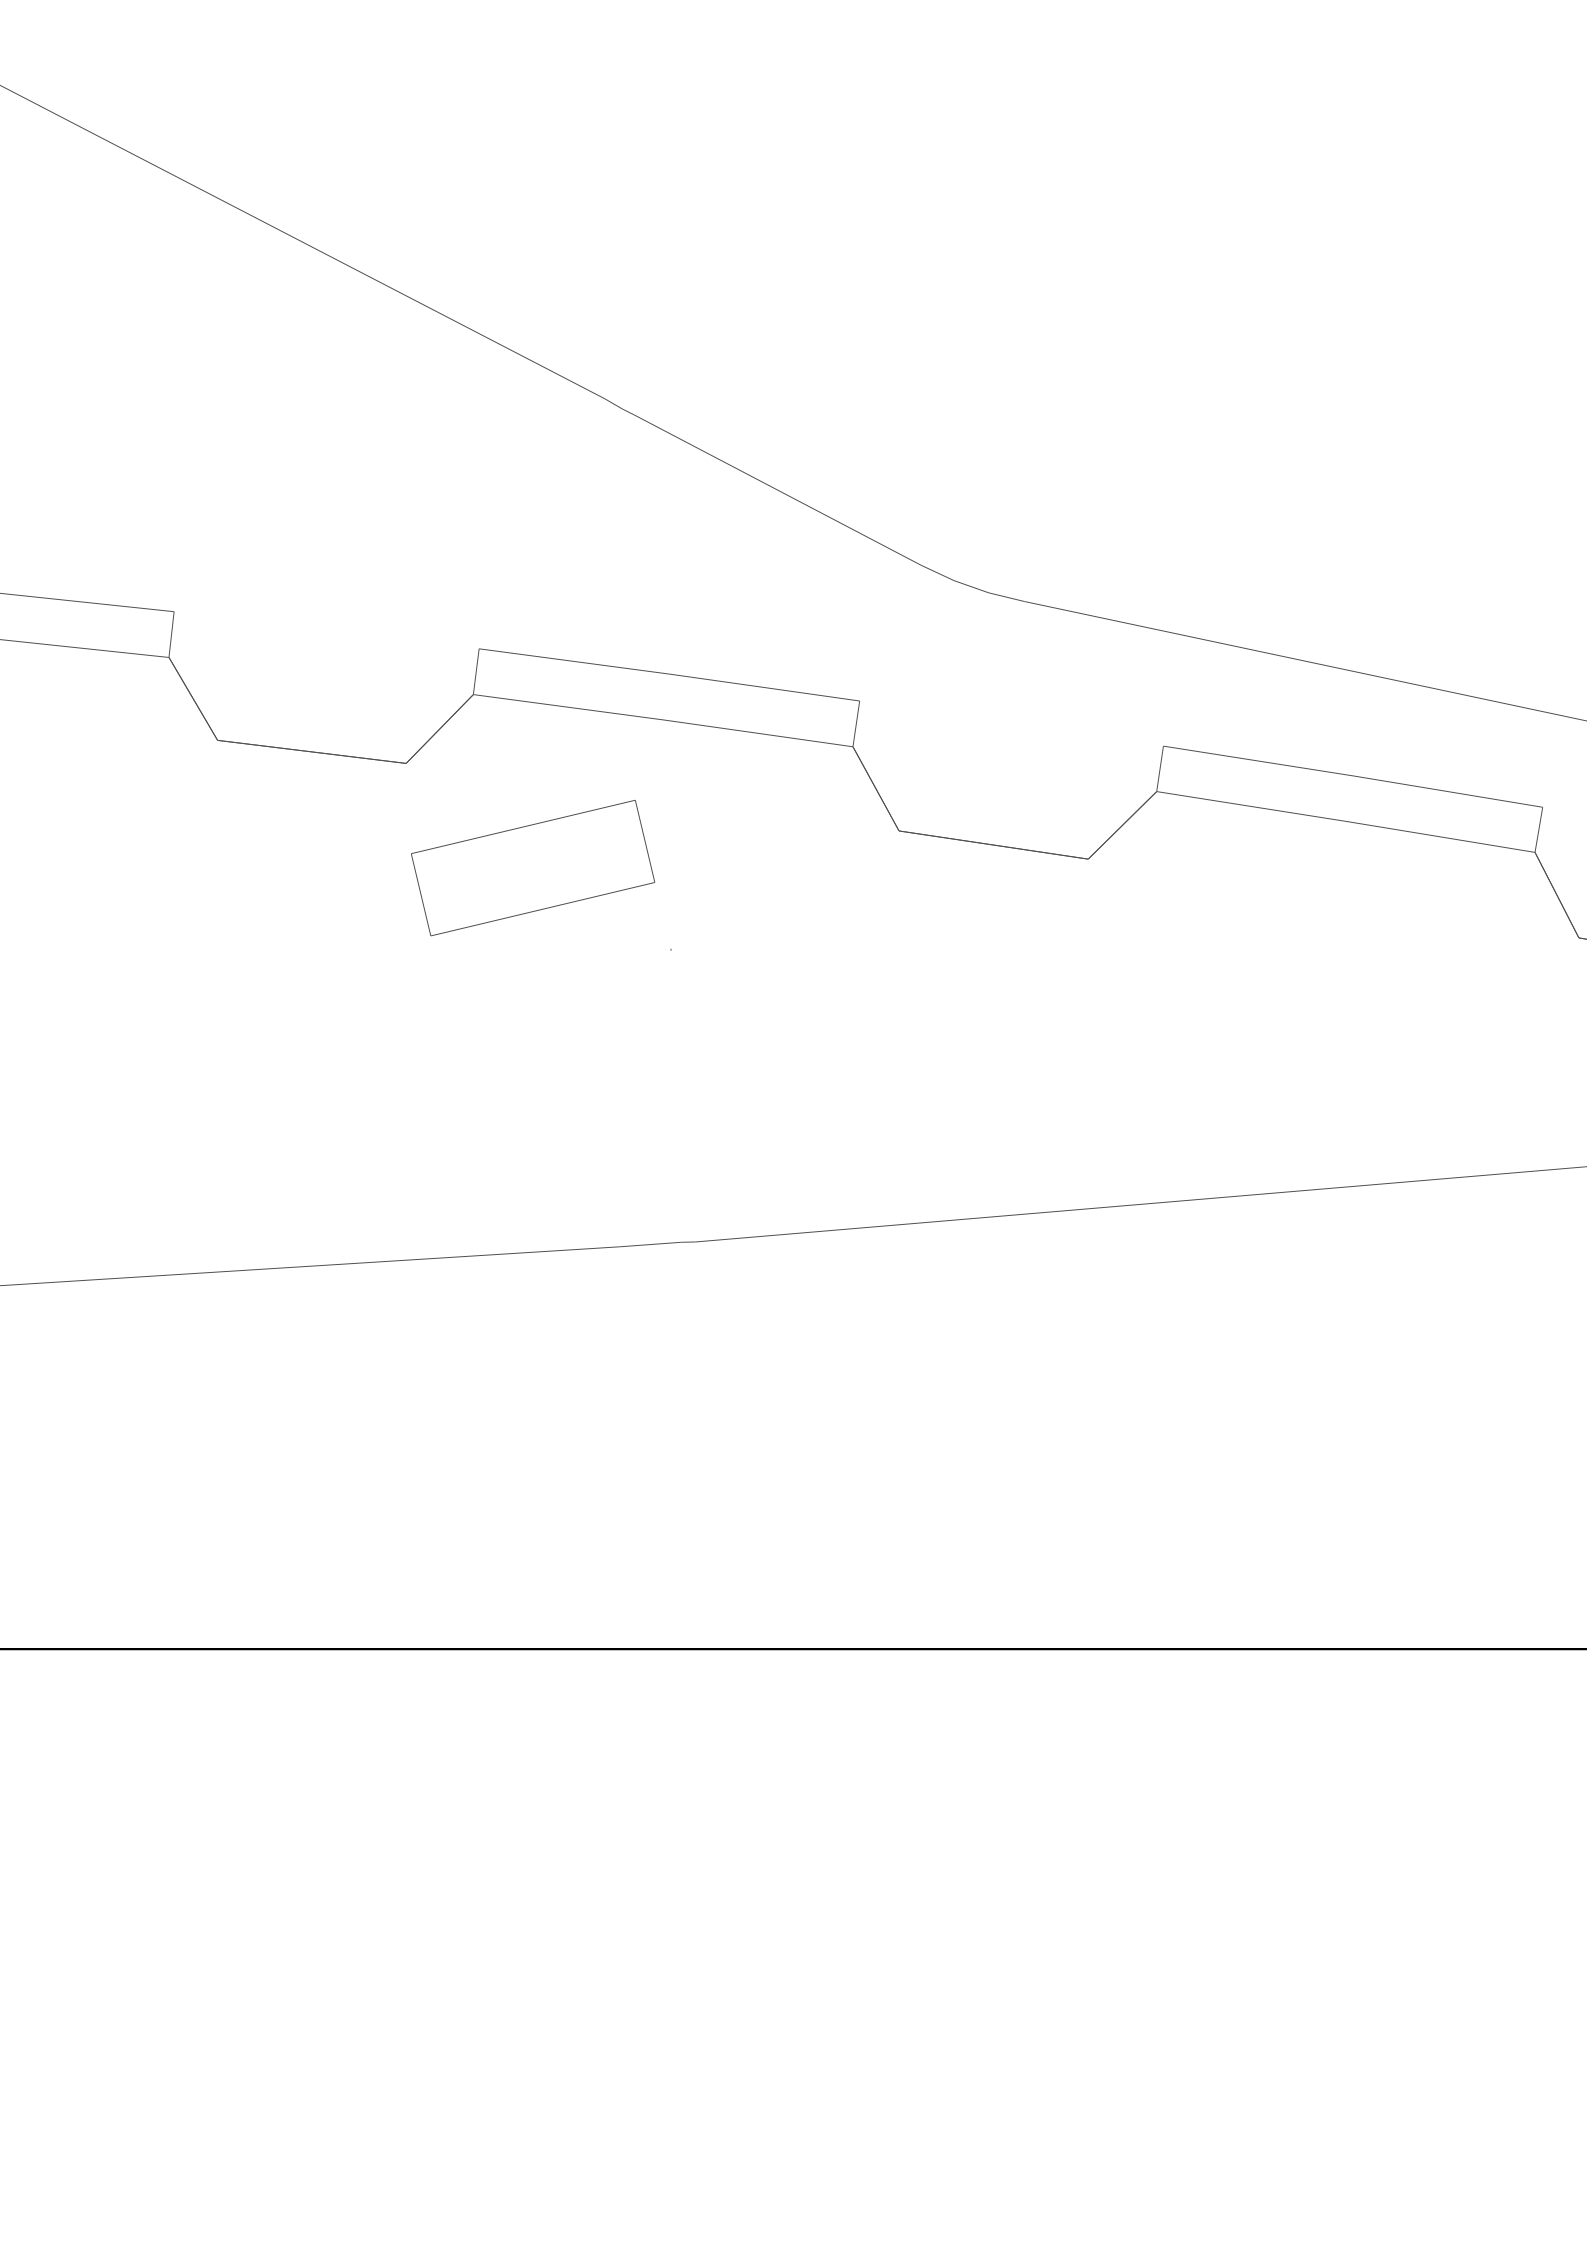



n Rafale XL

Page format: DIN A0 (1189x841mm)

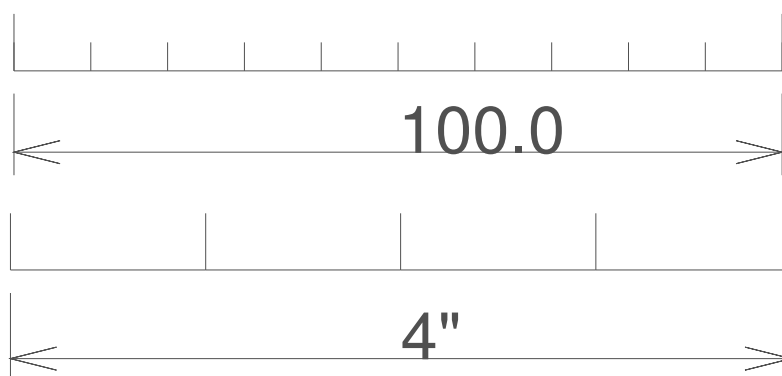

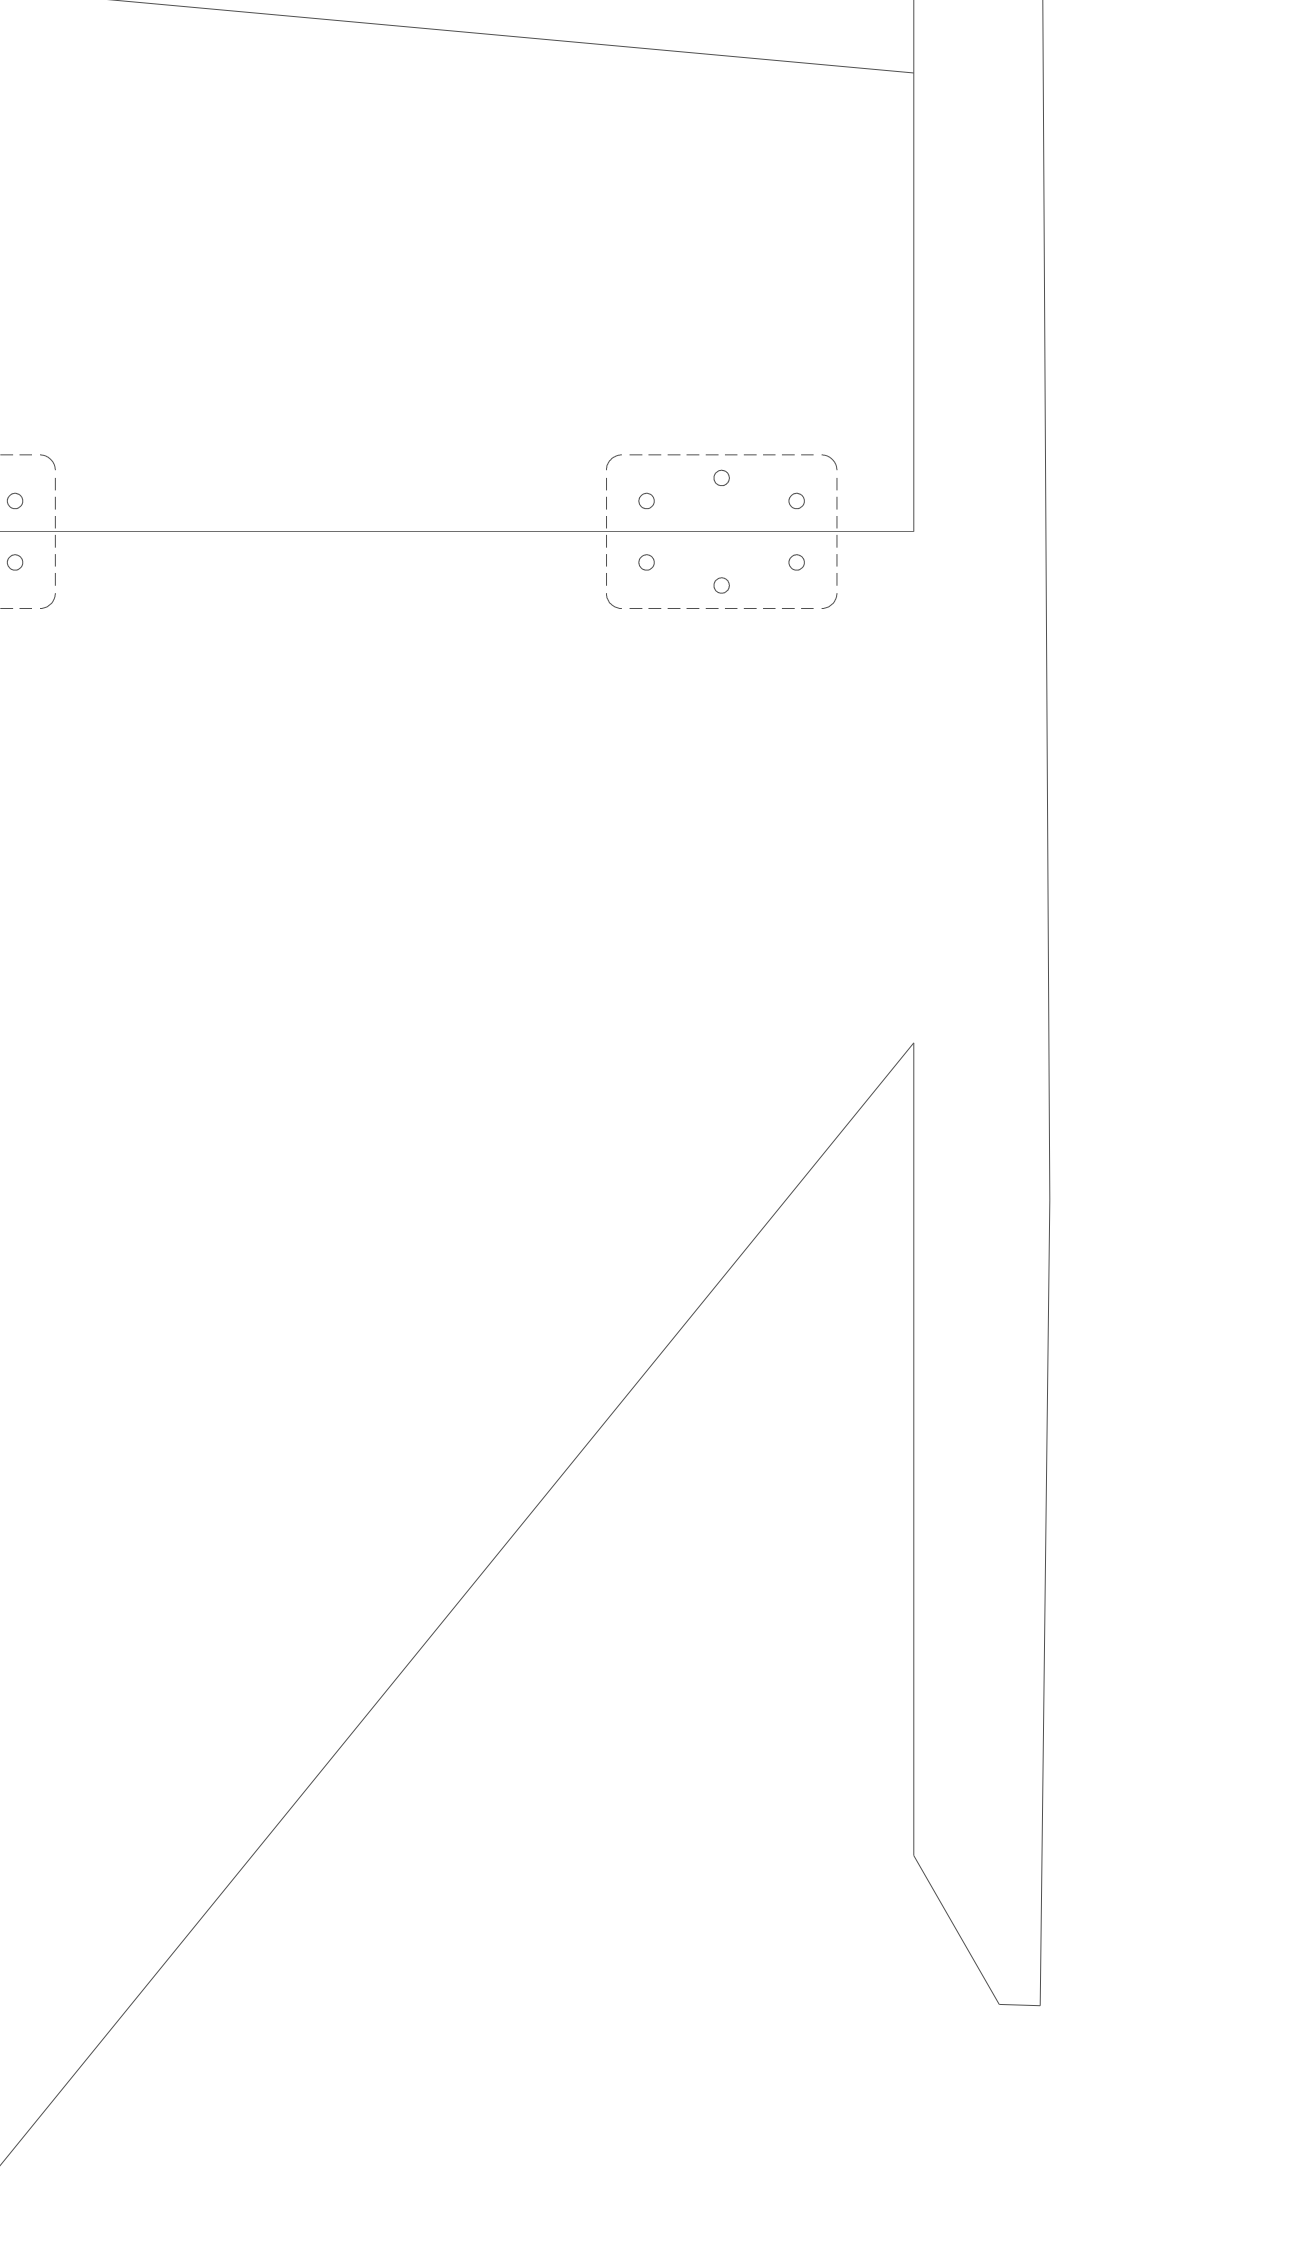



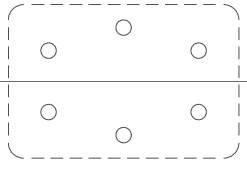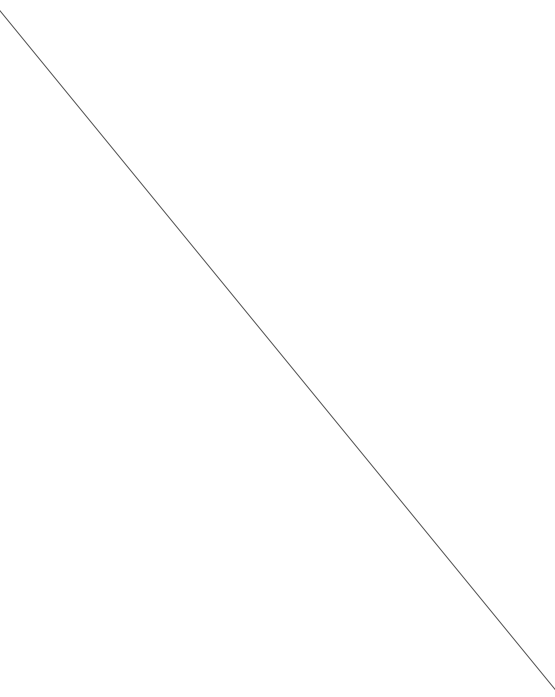

Tape wingtip to wing template



Tapo

C1a

